**Rectangular Inductive Proximity Sensors** ( 17/25/30/40 mm)

# PS Series (DC 3-wire)

**INSTRUCTION MANUAL** 

TCD210251AD

**Autonics** 

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using. For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.



Visit Autonics website (www.autonics.com or QR code) for the latest information, Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

## **Safety Considerations**

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
- A symbol indicates caution due to special circumstances in which hazards may occur.

**Warning** Failure to follow instructions may result in serious injury or death.

- 01. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.) is instruction may result in personal injury, economic loss or
- 02. Do not use or store the unit in the place where flammable/explosive/ corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present.

ure to follow this instruction may result in explosion or fire.

- 03. Do not disassemble or modify the unit. ailure to follow this instruction may result in fire
- 04. Do not connect, repair, or inspect the unit while connected to a power
- Failure to follow this instruction may result in fire
- 05. Check 'Connections' before wiring.

Failure to follow this instruction may result in fire.

▲ Caution Failure to follow instructions may result in injury or product damage.

- 01. Use the unit within the rated specifications.
- 02. Use a dry cloth to clean the unit, and do not use water or organic solvent.

#### **Cautions during Use**

- Follow instructions in 'Cautions during Use'. Otherwise, it may cause unexpected
- 12-24 VDC == power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Use the product, after 0.8 sec of supplying power.
- Wire as short as possible and keep away from high voltage lines or power lines, to prevent surge and inductive noise. Do not use near the equipment which generates strong magnetic force or high frequency noise (transceiver, etc.).
- In case installing the product near the equipment which generates strong surge (motor, welding machine, etc.), use diode or varistor to remove surge.
- This unit may be used in the following environments.
- Indoors (in the environment condition rated in 'Specifications')
- Altitude max. 2,000 m
- Pollution degree 2
- Installation category II

## **Cautions for Installation**

- Install the unit correctly with the usage environment, location, and the designated specifications.
- The waterproof function may be damaged if the product is subjected to impact from a hard object or bent excessively or repeatedly.
- Do NOT pull the Ø 4 mm cable with a tensile strength of 30 N or over.
- It may result in fire due to the broken wire.
- When extending wire, use AWG 22 cable or over within 200 m.
- Refer to the table below for the screw tightening torque when mounting the bracket.

	PSN17	PSN25	PSN30	PSN40
Tightening torque	0.49 N m	0.98 N m	0.98 N m	0.98 N m

## **Ordering Information**

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

PSN 0 - 2 3 4 5 - 6

#### Sensing side length

# Number: Side length of head (unit: mm)

Control output

N: NPN Normally Open N2: NPN Normally Closed P: PNP Normally Open P2: PNP Normally Closed

# Sensing distance

Number: Sensing distance (unit: mm)

No-mark: Standard type U: Upper side type

Sensing side

#### O Power supply

D: 12 - 24 VDC


#### 6 Frequency No-mark: Standard type F: Differential frequency type


#### **Product Components**

	PSN17	PSN25	PSN30	PSN40
Product	× 1	× 1	× 1	× 1
Instruction manual	× 1	× 1	× 1	× 1
Bracket	× 1	× 1	× 1	× 1
Bolt	M3 × 2	M4 × 2	M4 × 2	M5 × 2

#### Connections


# ■ Cable type

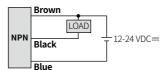


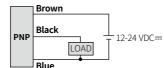

# ■ Inner circuit (NPN output)



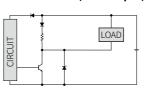

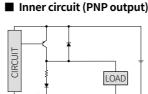

# **Operation Timing Chart**

		Normally open		Normally cl	osed
Sensing target		Presence		Presence	
		Nothing —			
Load		Operation		Operation	
		Return —		Return	
Output voltage	NPN output	H		H L	
	PNP	н		Н	
	output			L	
Operation indicator (red)		ON		ON	
		OFF —		OFF	

#### **Specifications**

Installation	Standard t Upper side		Standard type					
Model	PSN17- 5D	PSN17- 8D□□-□	PSN25- 5D□	PSN30- 10D□	PSN30- 15D□	PSN40- 20D□		
Sensing side length	18 mm	18 mm	25 mm	30 mm	30 mm	40 mm		
Sensing distance	5 mm	8 mm	5 mm	10 mm	15 mm	20 mm		
Setting distance	0 to 3.5 mm	0 to 5 mm	0 to 3.5 mm	0 to 7 mm	0 to 10.5 mm	0 to 14 mm		
Hysteresis	≤ 10 % of	≤ 10 % of sensing distance						
Standard sensing target: iron	18 × 18 × 1 mm	25 × 25 × 1 mm	25 × 25 × 1 mm	30 × 30 × 1 mm	45 × 45 × 1 mm	60 × 60 × 1 mm		
Response frequency <sup>01)</sup>	700 Hz	200 Hz	300 Hz	250 Hz	200 Hz	100 Hz		
Affection by temperature	± 10 % for sensing distance at ambient temperature 20 °C							
Indicator	Operation indicator (red)							
Certification	C€ FR EHI	C€ FR EHI	C€ 5½ EHI	C€ 5½ EHI	C€ 5½ EHI	C€ FR EUI		
Unit weight (package)	≈ 62 g (≈ 83 g)	≈ 62 g (≈ 83 g)	≈ 71 g (≈ 103 g)	≈ 96 g (≈ 165 g)	≈ 96 g (≈ 165 g)	≈ 135 g (≈ 225 g)		
1) The response frequency is the average value. The standard sensing target is used and the width is set as								


2 tillies of the stalldard ser	nsing target, 1/2 of the sensing distance for the distance.
Power supply	12 - 24 VDC== (ripple P-P: ≤ 10 %), operating voltage: 10 - 30 VDC==
Current consumption	≤ 10 mA
Control output	≤ 200 mA
Residual voltage	≤ 1.5 V
Protection circuit	Surge protection circuit, output short over current protection circuit, reverse polarity protection
Insulation type	≥ 50 MΩ (500 VDC== megger)
Dielectric strength	Between the charging part and the case: 1,500 VAC $\sim 50/60~{\rm Hz}$ for 1 min
Vibration	1 mm double amplitude at frequency 10 to 55 Hz in each X, Y, Z direction for 2 hours
Shock	500 m/s² (≈ 50 G) in each X, Y, Z direction for 3 times
Ambient temp.	-25 to 70 °C, storage: -30 to 80 °C (no freezing or condensation)
Ambient humi.	35 to 95 %RH, storage: 35 to 95 %RH (no freezing or condensation)
Protection structure	IP67 (IEC standard)
Connection	Cable type model
Wire spec.	Ø 4 mm, 3-wire, 2 m
Connector spec.	AWG 22 (0.08 mm, 60-core), insulator diameter: Ø 1.25 mm
Material	Case: Heat-resistant ABS, standard type cable (black): polyvinyl chloride (PVC)

# Dimensions


• Unit: mm, For the detailed dimensions of the product, follow the Autonics web site.

OTIII	IIIII, I OI tile detailed dii	1101131	oris or tric p
٩	Operation indicator (red)	В	Tap hole




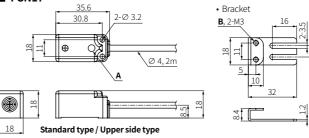


#### ■ PSN25

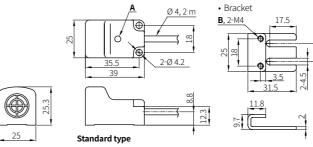

## ■ PSN30

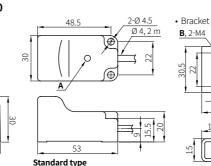

# ■ PSN40

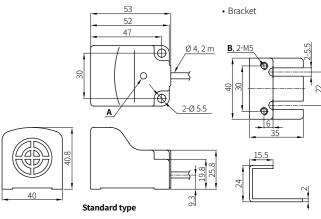


#### **Setting Distance Formula**

Detecting distance can be changed by the shape, size or material of the

For stable sensing, install the unit within the 70 % of sensing distance. Setting distance (Sa)

= Sensing distance (Sn) × 70 %

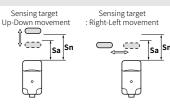

# Mutual-interference & Influence by Surrounding Metals

#### **■** Mutual-interference


When plural proximity sensors are mounted in a close row, malfunction of sensor may be caused due to mutual interference.

Therefore, be sure to provide a minimum distance between the two sensors, as below table



# ■ Differential frequency

When the several proximity sensors are installed closely each other, install standard  $type \ and \ differential \ frequency \ type \ sensors \ alternativa mently \ to \ prevent \ mutual$ interference due to frequency interference.

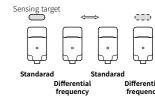

#### ■ Influence by surrounding metals


When sensors are mounted on metallic panel, it must be prevented sensors from being affected by any metallic object except target. Therefore, be sure to provide a minimum distance as below chart.

• Standard type





Upper side type

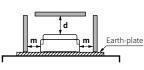

(unit: mm)

Model Item	PSN17-5	PSN17-8	PSN25	PSN30-10	PSN30-15	PSN40
Α	30	48	30	60	90	120
В	36	40	40	50	65	70
С	4	4	4	5	5	5
d	15	24	15	30	45	60
m	18	20	20	25	35	35

18, Bansong-ro 513Beon-gil, Haeundae-gu, Busan, Republic of Korea, 48002 nics.com | +82-2-2048-1577 | sales@autonics.con

